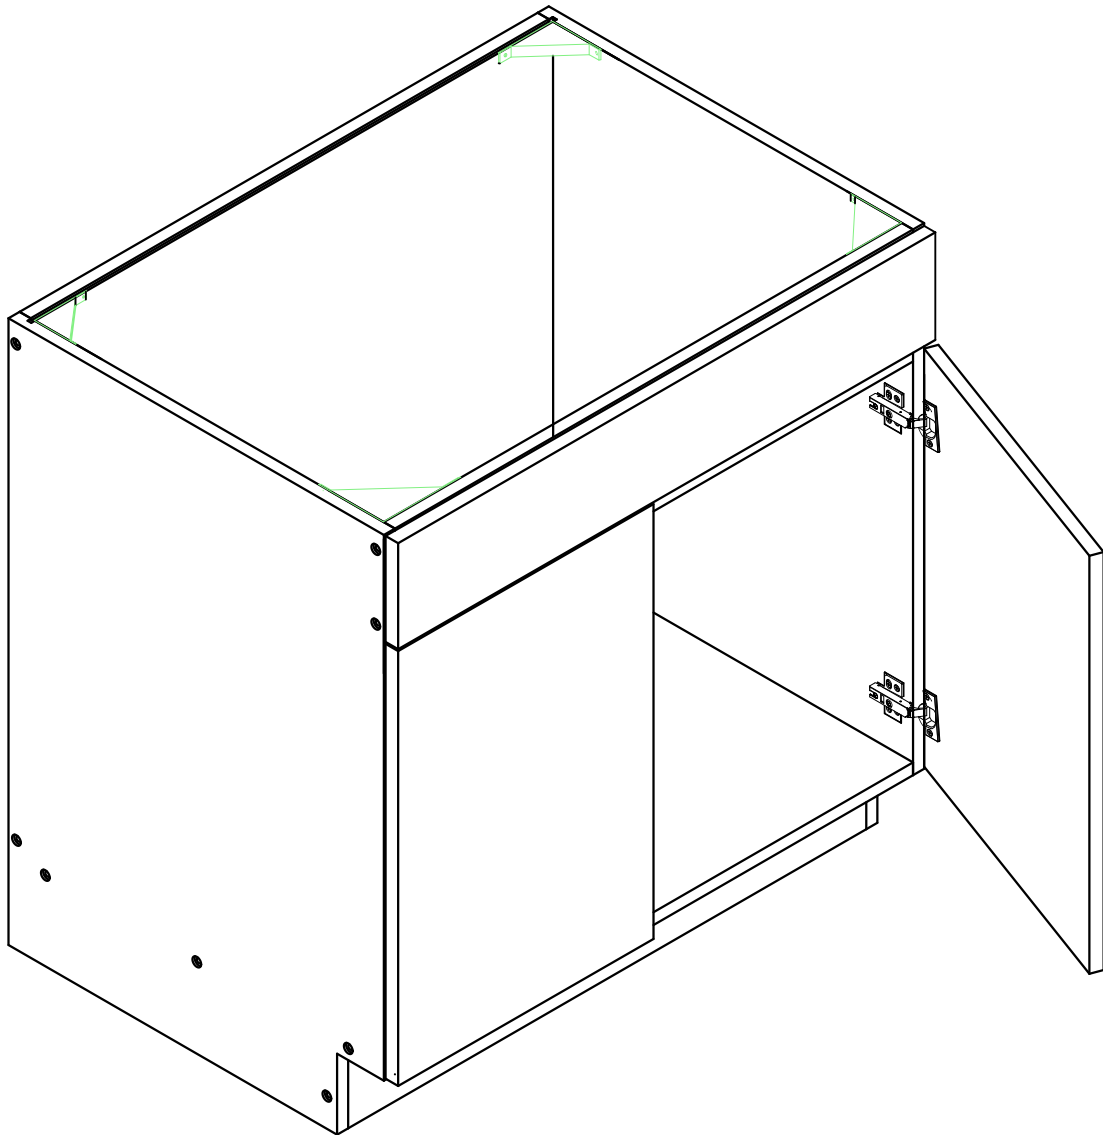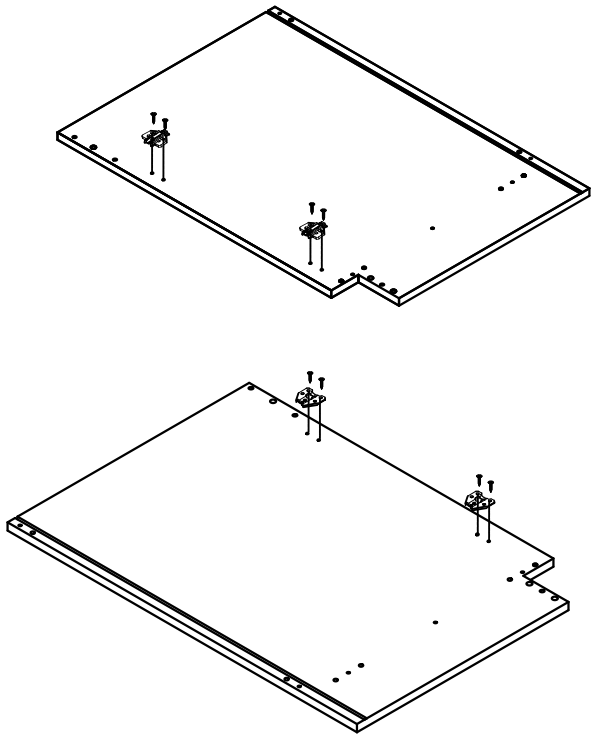# BASE CABINET
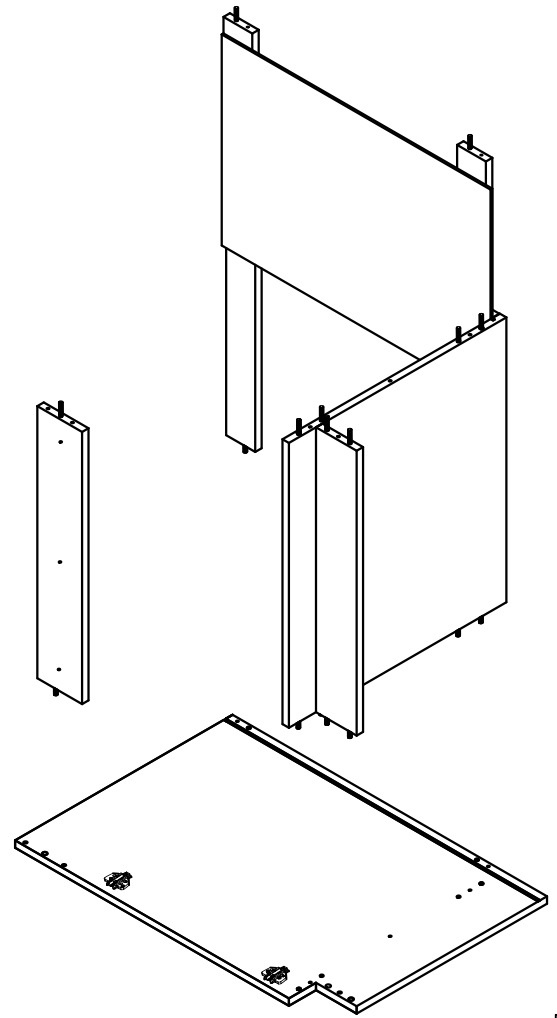# ASSEMBLY INSTRUCTION

SB(30-42)
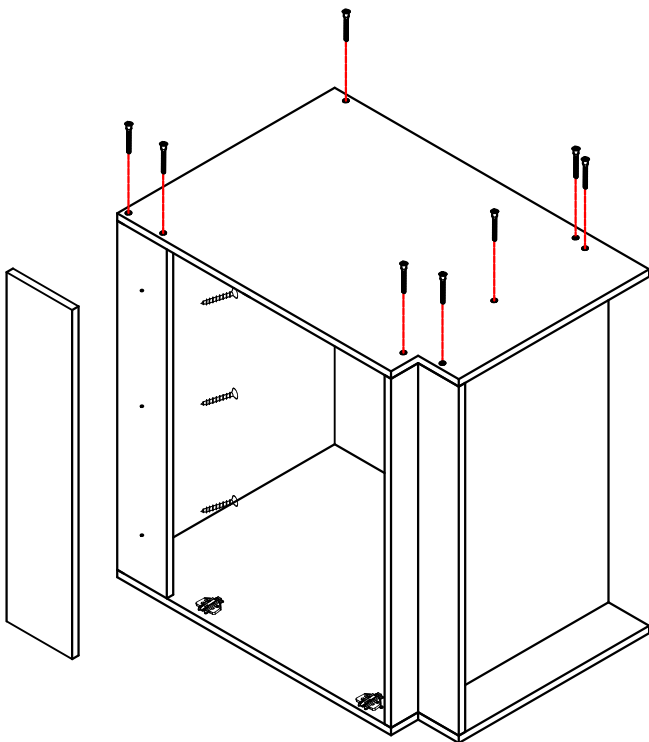VSB(24-36)

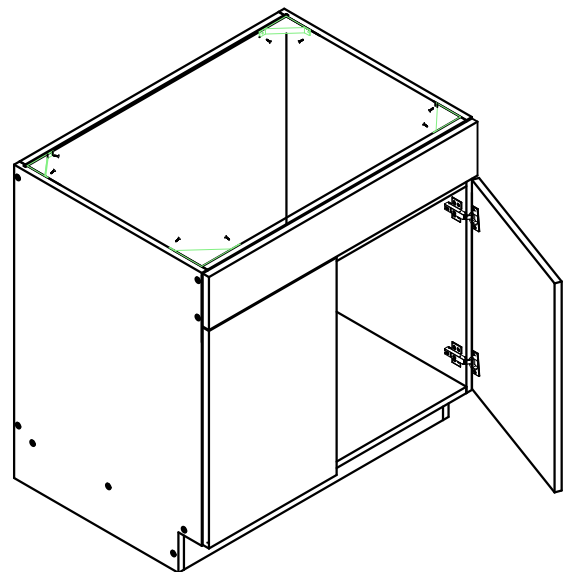Step—1

Step—2

The other side panel is also assembled with the screw

Step—3

Step—4